


## INSTRUCTIONS

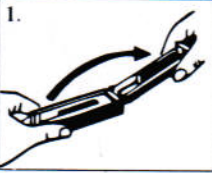

1. Open cover fully by lifting in an upward motion.



2. Fill slot with dried fine tobacco and compress with "tamper" until tobacco is well packed into the chamber. When filling the tobacco slot, start with both extremities, then the middle.



3. Insert open end of cigarette tube onto nozzle




4. While holding the "base" of the injector with one hand, close cover completely with the other hand.



5. Hold down and slide back and forth.



6. Open cover and slide it back slightly to allow the "finished" cigarette to be pulled off the nozzle.

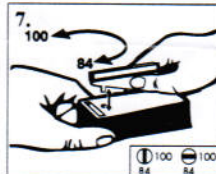

7. For all injectors especially made to make 100mm & KS cigarettes:

Based on the size of your preferred tubes, you will need to adjust the special "size device" located under the injector.

To select the size, turn the screw using the tamper to : 84 for KS tubes or 100 for the 100mm Extra Long tubes.

This device may not be available on all models.

**To ensure the making of perfect cigarettes, the following steps must be taken.**

For best result, allow tobacco to dry slightly. Fresh tobacco has a soft, wet feel. By drying the tobacco, you will obtain a slightly crisp feel and a perfect cigarette.

When using the injector for the first time, use less tobacco and keep increasing the quantity until properly filled cigarettes are made.

By using the "tamper" to ensure proper "pre-compression", an evenly packed cigarette will result without applying excess pressure during the sliding phase.

Patents applied for Canada, USA, Asia and Europe